

# VACUUM

## How to vacuum a pool

- 1) Turn off power supply to filter pump.
- 2) Rotate skimmer valve to close off main drain suction.
- 3) Turn on power supply to filter pump.
- 4) Place the vacuum head onto the telescopic handle, then the vacuum hose onto vacuum head.
- 5) Submerge vacuum head in pool water beside the skimmer and feed hose down into the water until all the air is out of the hose.
- 6) Place the hose through the front of the skimmer. Install the skimmer vacuum plate and then insert the vacuum hose into it.
- 7) Slowly vacuum the floor of the pool.
- 8) When finished vacuuming turn off the power supply to filter pump.
- 9) Rotate skimmer valve back to original position.
- 10) Remove all vacuuming equipment from pool including vacuum plate and empty the skimmer basket.
- 11) Backwash the sand filter.
- 12) Turn on power supply to filter pump.